DESIGN DETAILS

TANK CAR TECHNICAL DATA AND OPERATING FEATURES

Graduated Stainless Steel Bar Simplifies Liquid Level Gauging

Union Tank Car has developed a new E-Z Read™ visual gauge bar to provide tank car loaders and unloaders with a simpler way to accurately measure product outage in a non-pressure car. This improved design is now a standard feature provided at no additional cost.

Description

The 3x12" gauge bar is located inside the manway nozzle where it can be seen easily from the platform when the manway cover is open.

Numbers 1-8 indicate outage in inches and are permanently etched in steel. For easy reading, each number is highlighted by a punched-out triangular arrow. For more precise readings, the bar is also etch-marked in 1/4" increments, starting with a shell full "0" and descending to 9 inches of total outage.


Using The Gauge Bar To Measure Product


To determine the gallons of product in a tank car (innage), it is necessary to refer to the outage table which Union Tank Car provides with each car. For example, if the outage level on the gauge bar reads 2-1/2", the outage table tells how many gallons of outage the 2-1/2" level represents. The amount of product in the car is obtained by subtracting the gallons shown in the outage table from the capacity stencilled on the car. The correct gauge table number for each car is stencilled in 1" letters on both sides of the tank and on the safety railing near the top fittings.

Design Benefits

Loaders can quickly gauge product outage levels with the E-Z Read gauge bar by counting exposed arrows above the fluid level. The gauge bar is constructed from 304L stainless steel which is corrosion resistant and compatible with a wide range of commodities. Other materials are available upon request.

| | TABLE: 03220-00 |
|--|--|
| INCH GALS INCH GAS INCH GAS | JE TABLE: 03220-UC LS INCH GALS INCH 648 12.00 1,480 26.00 579 13.00 1,644 28.00 610 13.00 1,728 30.0 642 14.00 1,812 30.0 674 14.50 1,898 31.0 707 14.50 1,985 33. 740 15.50 2,073 34 774 15.50 2,073 34 16 00 2,162 35 |
| 1.50 142 7.25 1.75 165 7.25 2.00 180 7.75 2.50 213 8.00 2.75 263 8.25 | 774 808 842 877 912 947 18.00 2,252 36 37 37 17.50 2,435 37 17.50 2,435 17.50 2,435 18.00 2,527 2,621 |

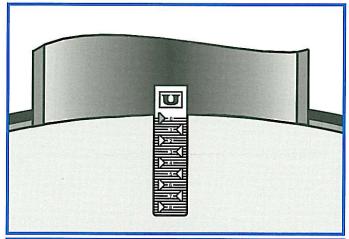

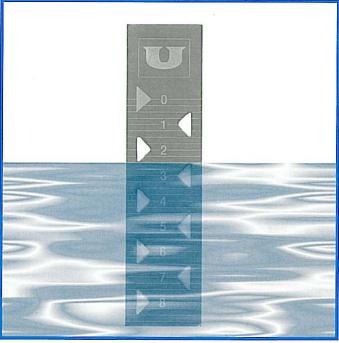

The E-Z Read gauge bar helps shippers determine loaded gallons in three easy steps: 1) Read fluid level on the gauge bar, 2) Refer to the car's outage table, 3) Subtract gallons shown in the outage table from capacity stencilled on the car.



Union Tank Car Company

A member of The Marmon Group of companies 111 W. Jackson Blvd., Chicago, IL 60604

Serving Shippers Through Design Innovation